


网络适配箱使用说明

一、网络适配箱外部接口介绍

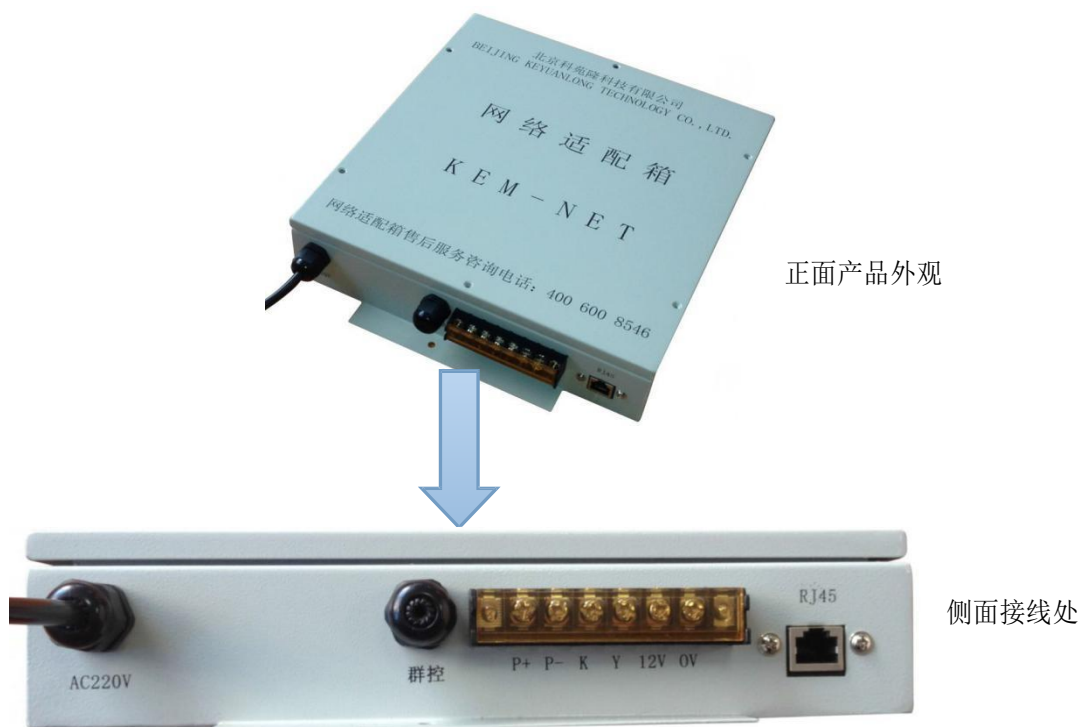

产品名称：网络适配箱

产品型号：(KEM-net)

外形尺寸：315*265*65 安装尺寸 110*290 螺栓 M5

安装位置：电梯的机房

作用：

与电梯原有的4方对讲系统做无间隙对接，实现数模转换。

网络适配箱适用于系统中的模拟信号装换位数字信号,可用于数据传输.并具有 USP 应急供电功能，可保持语音通话1小时。

二、网络适配箱设备参数设置

网络适配箱一般会跟项目情况，初期会配置一批 IP 地址和注册服务器地址，本机设备号在出厂时已经设定，以下表格请列出：

主机 IP							
序号	楼号	电梯位置	IP 设置	序号	楼号	电梯位置	IP 设置

三、设备本身IP 地址设置


准备材料：本机一台、网线一根。



设备按照此接线图连接，将网络适配箱上电。 根据网络适配左上脚标注的设备IP 地址，在浏览器内输入

进入设置界面登陆初始 IP:10.144.0.113,如附图 1 所示

附图 1

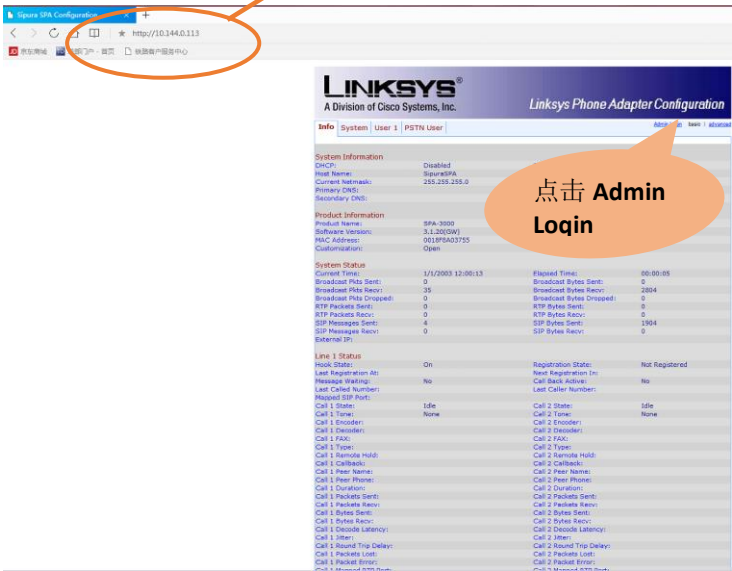

点击右上角的 Admin Login,进入 Voice,点击 System 和 Line1 如附图 2 和附图 3 所示

附图 2(初始界面 1)

LINKSYS®
A Division of Cisco Systems, Inc. Firmware Version: 5.1.8(LS)

Phone Adapter with 2 Ports for Voice-Over-IP PAP2

Voice Info System SIP Regional Line 1 Line 2 User 1 User 2

Basic View (switch to advanced view) User Login

System Configuration

Enable Web Server: yes User Password:

Internet Connection Type

DHCP: no Static IP: 10.144.0.113 NetMask: 255.255.255.0 Gateway: 10.144.0.1

Optional Network Configuration

HostName: Domain:
Primary DNS: Secondary DNS:
DNS Query Mode: Parallel Syslog Server:
Debug Server: Debug Level: 0

Save Settings Cancel Settings

CISCO SYSTEMS

附图 3 (初始界面 2)

Voice Info System SIP Regional Line 1 Line 2 User 1 User 2

Basic View (switch to advanced view)

SIP Settings

Line Enable: yes SIP Port: 5060

Proxy and Registration

Proxy: 10.144.0.254 Register: yes Register Expires: 3600
Make Call Without Reg: no Ans Call Without Reg: no

Subscriber Information

Display Name: 113 User ID: 113
Password: ***** Use Auth ID: no
Auth ID: 113

Supplementary Service

在红色标注处进行修改成你想要的 IP 地址,如附图 4 和附图 5 所示,修改完成点击左下角 Save Settings 保存

四、设备注册号的设置

附图 4

LINKSYS®
A Division of Cisco Systems, Inc.

Phone Adapter with 2 Ports for Voice-Over-IP

Voice

Info System SIP Regional Basic View

System Configuration

Internet Connection Type

Optional Network Configuration

Enable Web Server: yes

User Password:

DHCP: no

Static IP: 192.168.0.109

NetMask: 255.255.255.0

Gateway: 192.168.0.1

HostName:

Domain:

Primary DNS:

Secondary DNS:

DNS Query Mode: Parallel

Syslog Server:

Debug Server:

Debug Level: 0

设置需要适配箱 IP, 两项相同

附图 5

LINKSYS
A Division of Cisco Systems, Inc.

Phone Adapter with 2

Voice

Info System SIP Regional Line 1 Line 2 User 1 User 2

Basic View (switch to Advanced view)

SIP Settings

Line Enable: ☐ yes

SIP Port: 5060

Proxy: 192.168.0.254

Make Call Without Reg: ☐ no

Register: ☐ yes

Ans Call Without Reg: ☐ no

Register Expires: 3600

Subscriber Information

Display Name: 109

Password: *****

User ID: 109

Auth ID: 109

Use Auth ID: ☐ no

Supplementary Service Subscription

Call Waiting Serv: ☐ yes

Block CID Serv: ☐ yes

Dist Ring Serv: ☐ yes

Cfwd All Serv: ☐ yes

Cfwd Busy Serv: ☐ yes

Cfwd No Ans Serv: ☐ yes

Cfwd Sel Serv: ☐ yes

Cfwd Last Serv: ☐ yes

Block Last Serv: ☐ yes

Accept Last Serv: ☐ yes

DND Serv: ☐ yes

CID Serv: ☐ yes

CW/CID Serv: ☐ yes

Call Return Serv: ☐ yes

Call Back Serv: ☐ yes

Three Way Call Serv: ☐ yes

Three Way Conf Serv: ☐ yes

Attn Transfer Serv: ☐ yes

Unattn Transfer Serv: ☐ yes

MWI Serv: ☐ yes

VMWI Serv: ☐ yes

Audio Configuration

Preferred Codec: G711u

Silence Supp Enable: ☐ no

Use Pref Codec Only: ☐ no

FAX CED Detect Enable: ☐ yes

DTMF Tx Method: Auto

Save Settings Cancel Settings

红色标注 1 的位置为服务器地址：一般默认为 10.1440.0.113

现图示为 192.168.0.254

红色标注 2 的位置为适配箱的设备号：可以根据你的需要注册做任意改变，一般默认为 113 现图示为 109